



Computer Vision

Blob matching

1 September 2012

Copyright © 2001 – 2012 by
NHL Hogeschool and Van de Loosdrecht Machine Vision BV
All rights reserved

j.van.de.loosdrecht@tech.nhl.nl, jaap@vdlmv.nl

Blob matching

Overview:

- Introduction
- Demonstrations
 - Creating a Blob Matcher (BM)
 - Matching a blob
 - Evaluating a BM with a Class Image Set (CIS)
 - Using a BM with a blob group (*)
- Exercises
- Demonstrations
 - FindPatterns: Finding all patterns in an image
 - FindBlob: Finding one blob in an image
- Comparing with alternative methods
- Using in scripts (*)
- Class Lexicon (*)

29-aug-12

Blob matching

2

Introduction classification

Classification:

the assignment of an object characterized by a set of features to one of a number of predefined classes.

Example: Optical Character Recognition


29-aug-12

Blob matching

3

Introduction classification



- **Learning mode**
 - Learn set: set of objects with known classes

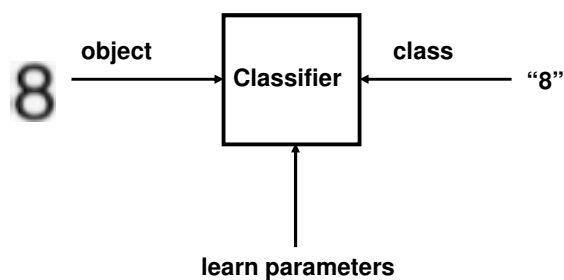

29-aug-12

Blob matching

4

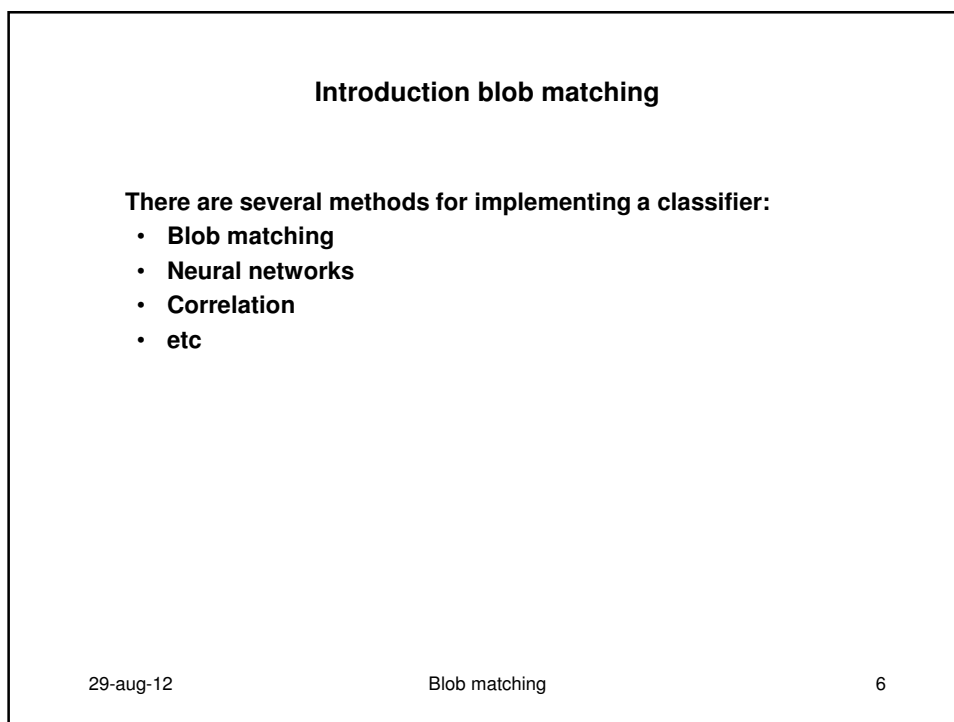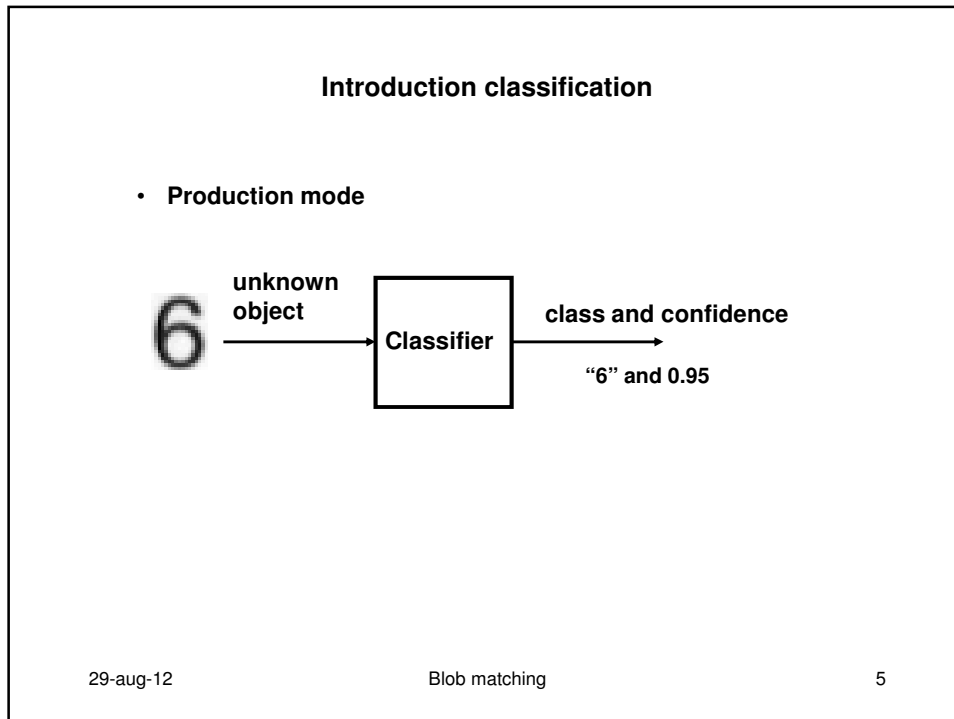

Introduction blob matching

Idea:

- **Training:**
 - add one example pattern for each class
- **Matching:**
 - For all patterns do**
 - Resize blob to same size as pattern
 - **For n rotations do**
 - Rotate resized blob
 - Calculate difference by mapping center of gravities
 - Best match is pattern with the smallest difference**


29-aug-12

Blob matching

7

Introduction blob matching

Calculate differences after normalizing for size and alignment on center of gravity

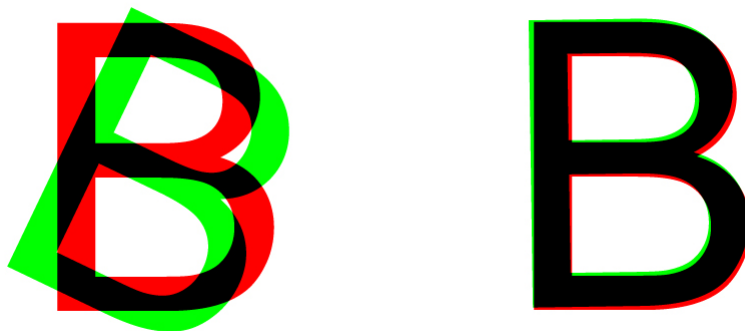

29-aug-12


Blob matching

8

Introduction blob matching

Calculating the differences:

- **Contour matching:** using the contour pixels only (fast)
- **Filling matching:** the interior of the object is sampled to find more accurate match (slower)
example: nr of rotations = 8, fillSampleSize = 3

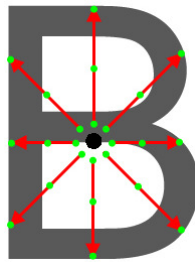

29-aug-12

Blob matching

9

Introduction blob matching

Filling matching has 2 parameters:

- **fillSampleSize**
the number of samples on each rotation ray
- **perimeterFillRatio**
the ratio of the contribution between the error calculated by the contour match and the filling matching
 $\text{total error} = \text{contour error} + \text{perimeterFillRatio} * \text{filling error}$

Examples:

- **perimeterFillRatio = 0:** only contour matching
- **perimeterFillRatio = 1:** both contour and filling matching with equal weights
- **perimeterFillRatio = 100:** “only” filling matching

29-aug-12

Blob matching

10

Introduction blob matching

The Blob Matcher is a tool which finds the best match for a blob from a list of blobs. For good operation it is required that the blobs can be segmented reliable

The implementation of the Blob Matcher in Vision Lab uses a combination of 3 techniques:

- Contour matching, mandatory
Parameter: number of rotations
Only the contour pixels are used to find the scaling and rotation
- Filling matching, optional
Parameters: perimeterFillRatio and fillSampleSize
The interior of the object is sampled to find more accurate scaling and rotation
- Random check, optional, *normally NOT used, default value = 0*
Parameter: randomSampleSize
Maximum number of pixels which are selected to check the matching

29-aug-12

Blob matching

11



Demonstration creating a blob matcher

- Select "Create Blob Matcher" from File menu
 - Image type: Int16Image
 - Nr of rotations: 60
 - Perimeter fill ratio: 1
 - Fill sample size: 20
 - Random sample size: 0
 - Click create button
- Open image gray09.jl, image with the templates
- ThresholdIsoData image
- Use ROI to crop '0' in separate image
- 2nd select image with '0'
- Type in 'zero' in field right to Add pattern button
- Click Add pattern button
- Add the other nine numbers
- (use BM_09.pm for complete matcher without adding all digits manual)


29-aug-12

Blob matching

12

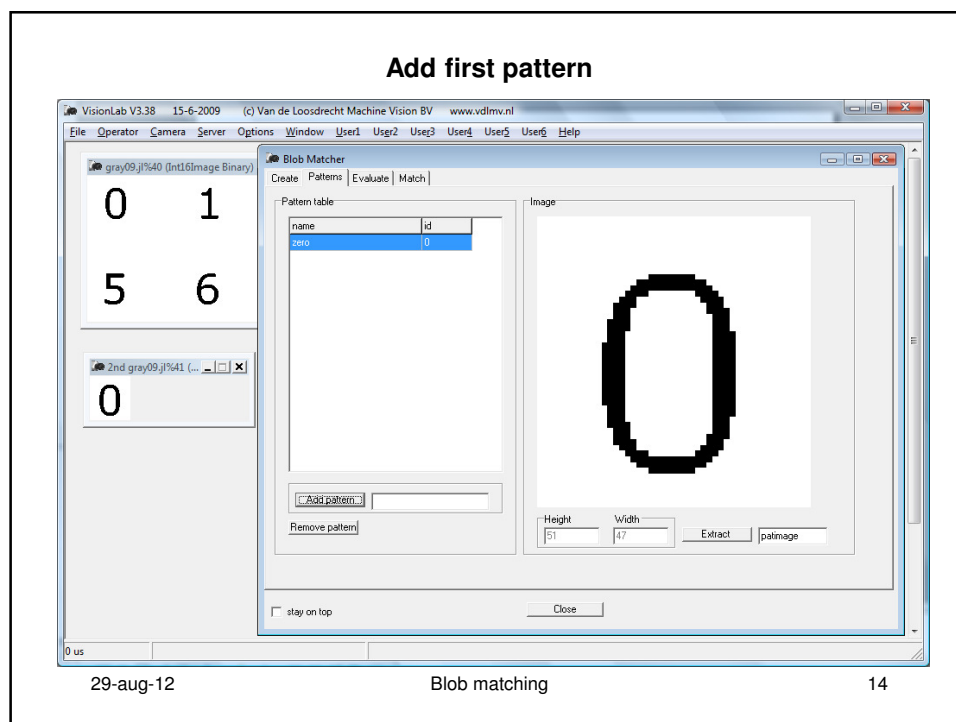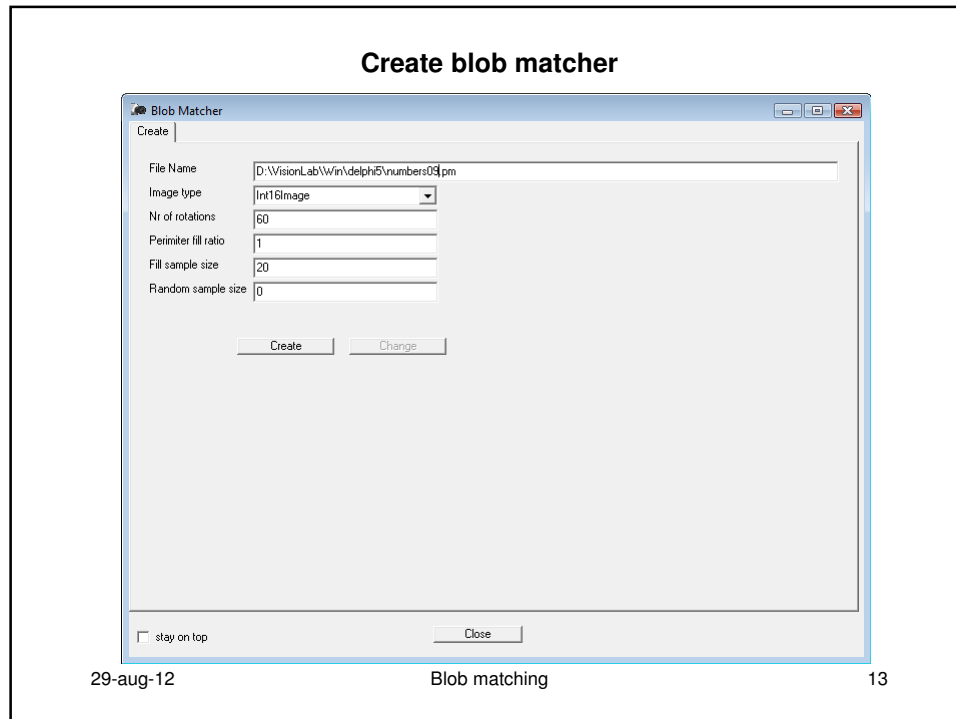

After adding the 10th pattern

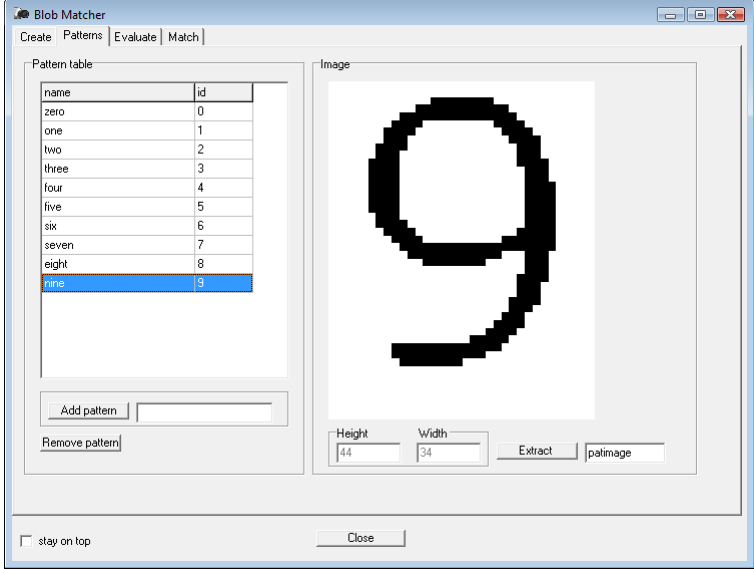

29-aug-12 Blob matching 15

Demonstration matching a blob

- Extract the image for number 6 with the extract button
- Select image as 2nd selected
- Go to the Match tab
- Set begin angle to -0.5 and end angle to 0.5.
begin and end angle limit the search range for the rotation
- Click the Match button and analyse the results
- Reduce the size of the image with ZoomXY 0.75 0.75 NearestPixelInterpolation
- RotateFull result image 0.2 0 NearestPixelInterpolation
- Click the Match button and analyse the results

29-aug-12 Blob matching 16

Match the six

The screenshot shows the VisionLab V3.38 interface with the Blob Matcher window. The 'Match results' section displays a table of matches for the digit '6'. The 'Match' button is highlighted, indicating a successful match with a confidence of 1.0.

name	id	error	scale	angle
six	6	0	1	0
zero	0	0.251144	1.13573	0.10472
nine	9	0.279686	1	0.10472
four	4	0.28529	1.09197	-0.523599
five	5	0.307226	1.00369	-0.10472
eight	8	0.324699	1.12528	-0.10472
three	3	0.345657	0.996131	-0.20944
two	2	0.363138	0.975774	-0.20944
seven	7	0.38722	0.830251	-0.10472
one	1	0.403589	1.0084	0.10472

Match results: Begin angle: 0.5, End angle: 0.5, Confidence: 1

use second selected: ☒ Match

stay on top: ☐ Close

342 us 10 6 0 1 0 0 0.251144 1.13573 0.10472 9 0.279686

29-aug-12 Blob matching 17

Match the scaled and rotated six

The screenshot shows the VisionLab V3.38 interface with the Blob Matcher window. The 'Match results' section displays a table of matches for the digit '6'. The 'Match' button is highlighted, indicating a successful match with a confidence of 0.733556.

name	id	error	scale	angle
six	6	0.0814266	0.745353	0.20944
zero	0	0.271149	0.945522	0.314159
five	5	0.286885	0.7461	0
nine	9	0.292756	0.745353	0.314159
four	4	0.293274	0.813901	-0.418879
eight	8	0.30321	0.836733	0.10472
three	3	0.342476	0.742469	0
two	2	0.37489	0.727296	0
seven	7	0.397635	0.61883	0.20944
one	1	0.406725	0.751615	0.314159

Match results: Begin angle: 0.5, End angle: 0.5, Confidence: 0.733556

use second selected: ☒ Match

stay on top: ☐ Close

390 us 10 6 0.0814266 0.745353 0.20944 0 0.271149 0.84

29-aug-12 Blob matching 18

Interpreting the result of the match

- In the table the patterns are sorted on error value
- The scale value is the zoom factor for the pattern to match the size of the test image
- The angle value is the rotation angle in radians
- The error indicates the “distance” between the test image and the pattern after rotation and scaling
- The confidence indicates the “distance” between the best match and the second best match

Notes:

- The blob matcher will always try to find the best possible match, even if an unknown pattern is tested
- The quality of the match can be analyzed using the error value of the best match and the confidence value

29-aug-12

Blob matching

19

Class Image Set (CIS)

- A CIS is a collection of images with their associated classes. All images in a CIS must have the same image type and size.
- CIS:
 - Class table with the name and id of each class
 - For each class an image table, each image in an image table has its unique image index number
- A CIS is created in a similar way as the pattern table of a blob matcher. But there can be more than one image for each class.

For more information about CIS look in the chapter about neural networks

29-aug-12

Blob matching

20


Demonstration class image set

- Open CIS number09.cis
- Browse through class table
- Browse through image table

29-aug-12

Blob matching

21

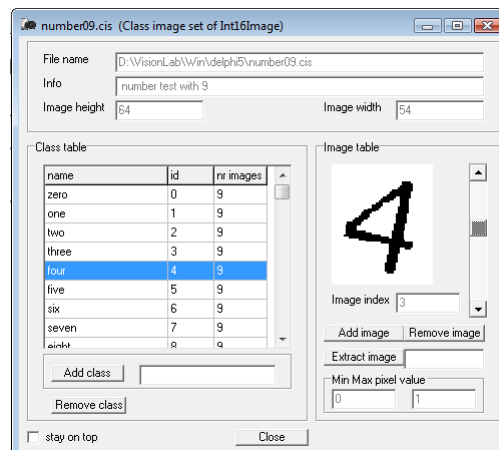Class Image Set number09.cis

29-aug-12

Blob matching

22

Demonstration evaluating a blob matcher

- Go to the Evaluate tab
- Select the CIS number09.cis by double clicking the Evaluation set (CIS) field or typing in the correct file name
- Set begin angle to -0.5 and end angle to 0.5
- Set low confidence to 0.6
- Set Eval details to HighDetails
- Click the Evaluate button and analyze the results
- Note: the corresponding image of a line the result table can be inspected with double clicking on that line.

29-aug-12

Blob matching

23

Evaluating a blob matcher

The screenshot shows the VisionLab V3.38 software interface. The main window has tabs for 'Create', 'Patterns', 'Evaluate', and 'Match'. The 'Evaluate' tab is selected, showing a table of evaluation results. The table has columns for 'expected', 'result', 'image index', 'confidence', 'error', 'scale', 'angle', 'zero', and 'one'. The results show various matches between expected and actual values, with confidence scores ranging from 0.13331 to 0.59044. Below the table, there are fields for 'Evaluation set (CIS)', 'Begin angle', 'End angle', 'Low confidence', and 'Eval details'. The 'Evaluate' button is visible at the bottom right of the table area.

expected	result	image index	confidence	error	scale	angle	zero	one
two	two	2	0.59044	0.13331	1.42765	-0.418879	0.378891	0.350775
two	two	4	0.507681	0.168227	1.61987	0.20944	0.418063	0.312068
three	three	5	0.561635	0.0926708	1.71745	-0.10472	0.393162	0.316794
five	five	0	0.480843	0.128302	1.47088	0	0.340834	0.367421
five	five	2	0.448995	0.144361	1.54752	0.418879	0.336504	0.392769
five	five	3	0.529133	0.107388	1.59335	0.418879	0.369223	0.381211
five	five	5	0.598524	0.0940083	1.28186	0.10472	0.352523	0.372988
five	five	7	0.571214	0.101295	1.75197	0	0.349328	0.380949

Configuration fields:

- Evaluation set (CIS): D:\VisionLab\Win\delph5\number09.cis
- Begin angle: -0.5
- End angle: 0.5
- Low confidence: 0.6
- Eval details: HighDetails
- Buttons: Evaluate, Extract Image, evalimage

29-aug-12

Blob matching

24

Example using blob matcher with a blob group (*)

The Blob Matcher can also be used for images that contain a group of blobs


In the next example the eyes of dice will be matched

Use script `BM_dice.js` to generate test images, `dice.pm` and evaluation `dice.cis`

29-aug-12

Blob matching


25

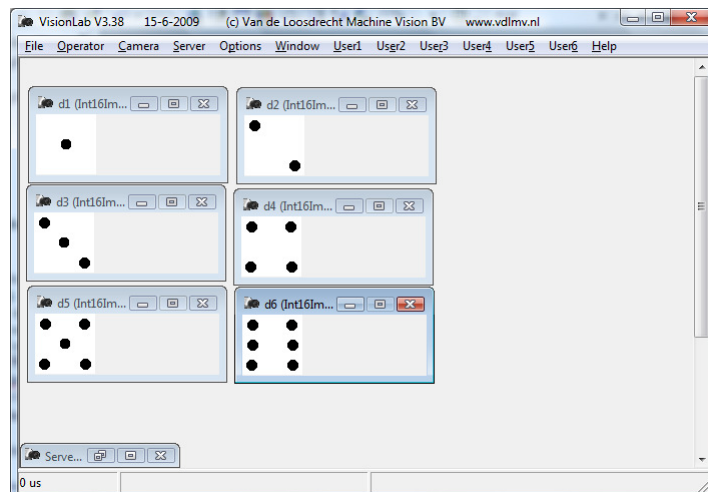Example using blob matcher with a blob group (*)

29-aug-12

Blob matching


26

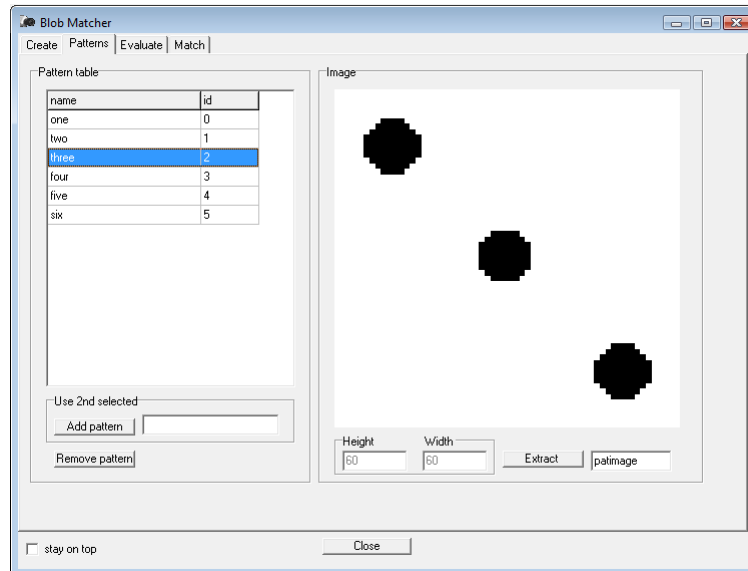Example using blob matcher with a blob group (*)

29-aug-12

Blob matching

27

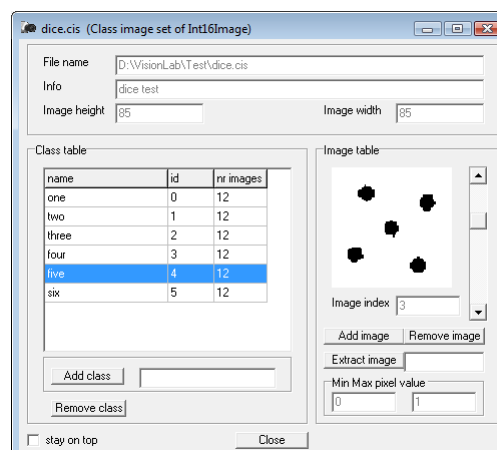Example using blob matcher with a blob group (*)

29-aug-12

Blob matching

28

Example using blob matcher with a blob group (*)

The screenshot shows the 'Blob Matcher' application window. It has tabs for 'Create', 'Patterns', 'Evaluate', and 'Match'. The 'Evaluate' tab is active, displaying a table of matching results. The table has columns: 'expected', 'result', 'image index', 'confidence', 'error', 'scale', 'angle', 'one', and 'two'. The 'expected' column lists categories like 'two', 'three', and 'four'. The 'result' column shows the matched category. The 'image index' column shows the index of the image in the group. The 'confidence' column shows the matching confidence. The 'error' column shows the matching error. The 'scale' column shows the matching scale. The 'angle' column shows the matching angle. The 'one' and 'two' columns show the matching results for the two images in the group.

expected	result	image index	confidence	error	scale	angle	one	two
two	two	2	0.48848	0.110635	1.12571	0.10472	0.887347	0.110635
two	two	3	0.493815	0.105455	0.887613	3.03687	0.886526	0.105455
two	two	4	0.490176	0.107863	0.852529	1.88496	0.888023	0.107863
two	two	6	0.491022	0.103967	0.858234	0.418879	0.885794	0.103967
two	two	7	0.492407	0.111083	0.982293	-0.20944	0.888625	0.111083
two	two	9	0.492853	0.10687	1.214	-0.10472	0.887281	0.10687
two	two	11	0.490143	0.110491	1.20686	-2.19911	0.887619	0.110491
three	three	7	0.413401	0.104461	1.12412	2.61799	0.781526	0.147521
four	four	1	0.368006	0.157248	1.10577	1.5708	0.827931	0.294531
four	four	2	0.353861	0.158648	1.05262	-2.40855	0.82879	0.295671
four	four	4	0.390462	0.139654	1.1814	2.30383	0.822586	0.290551
four	four	5	0.449464	0.109435	1.14118	-2.40855	0.816914	0.295911
four	four	6	0.346649	0.151413	1.18112	1.36136	0.818137	0.296051

Below the table, there are input fields for 'Evaluation set (CIS)' (D:\VisionLab\Test\vdice.cis), 'Begin angle' (-3.1416), 'End angle' (3.1416), 'Low confidence' (0.5), 'Eval details' (HighDetails), and an 'Evaluate' button. There is also an 'Extract Image' button with a text field 'evalimage'.

29-aug-12

Blob matching

29

Exercise using blob matcher with a blob group (*)

Experiment with the parameters of blob matcher in order to get less low confidences

29-aug-12

Blob matching

30

Exercise 1 blob matcher


- **Experiment with the parameters:**
 - number of rotations
 - perimeterFillRatio and fillSampleSize
 - (set randomSampleSize = 0)
- **Change parameters and use CIS to evaluate, look at changes in:**
 - Accuracy (like nr errors and nr low confidences)
 - Speed of execution

29-aug-12

Blob matching

31

Exercise 2 blob matcher

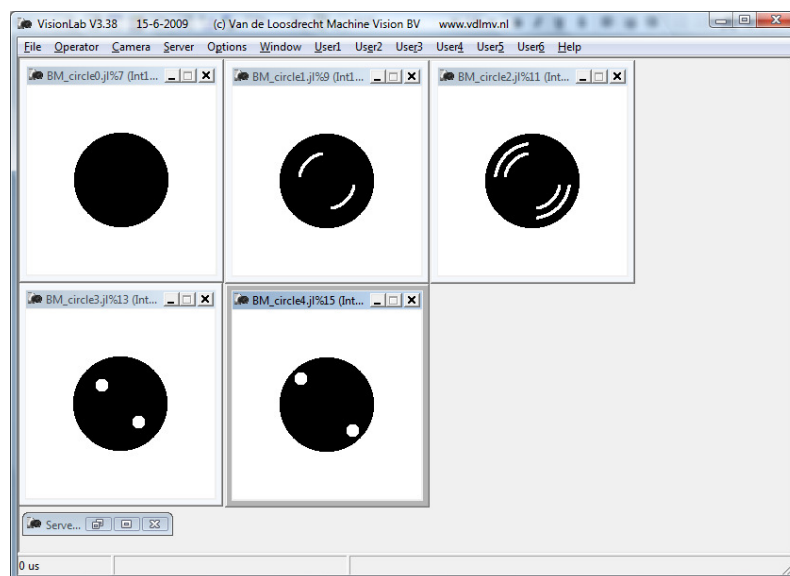

29-aug-12

Blob matching

32

Exercise 2 blob matcher

- Create a blob matcher with the 5 patterns in the image BM_circles0 .. BM_circles4
- Test blob matcher with different parameters on test images with different scaling and rotation
- Can you find a setting with parameter `perimeterFillRatio = 0`? Explain why

See for answer script BM_circles.js

29-aug-12

Blob matching

33



Demonstration finding all patterns in an image

- **NOTE: this operator works with a labeled image**
- Open image BM_test.jl
- ThresholdIsoData image DarkObject
- Label image EightConnected
- Open blob matcher test08.pm
NrOfRotations=80, FillRatio=1, SamplesSize=20, RandomSize =0
- Show patterns (no '9' because of rotation symmetry with '6')
- Select Find tab
- Second select labeled image using F5
- Find patterns with MaxError = 0.15, MinConf = 0.4, Angle <-3.14 .. 3.14>
- Click on entry in the label table to show position of the label in the image
- Click on entry in the pattern table to show all blobs classified as specified pattern in the image.
- Note: this operator can NOT be used for blob groups


29-aug-12

Blob matching

34

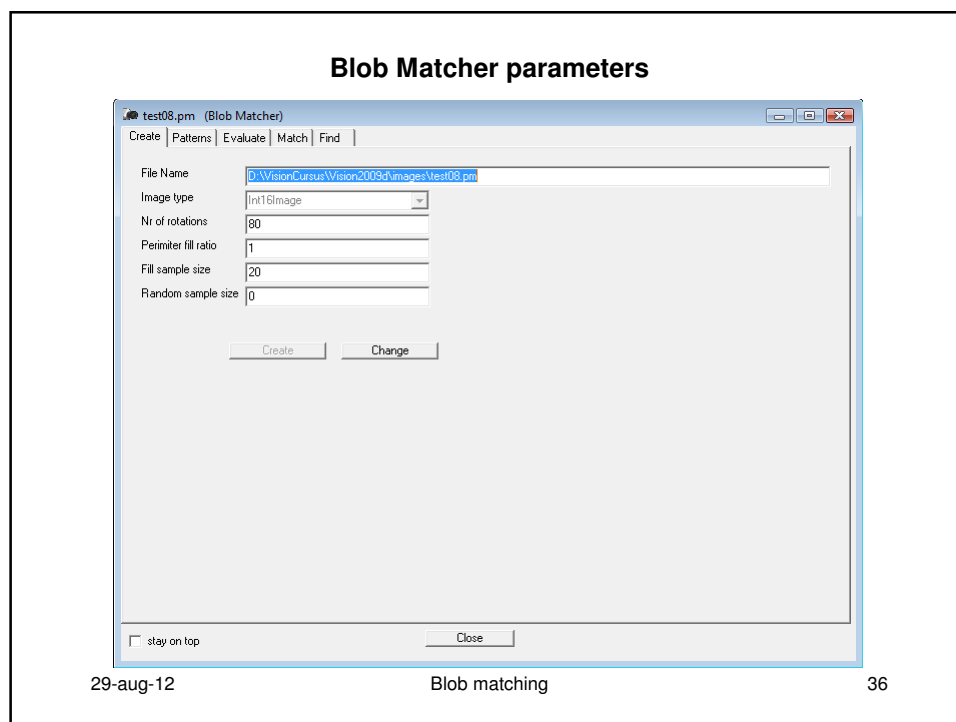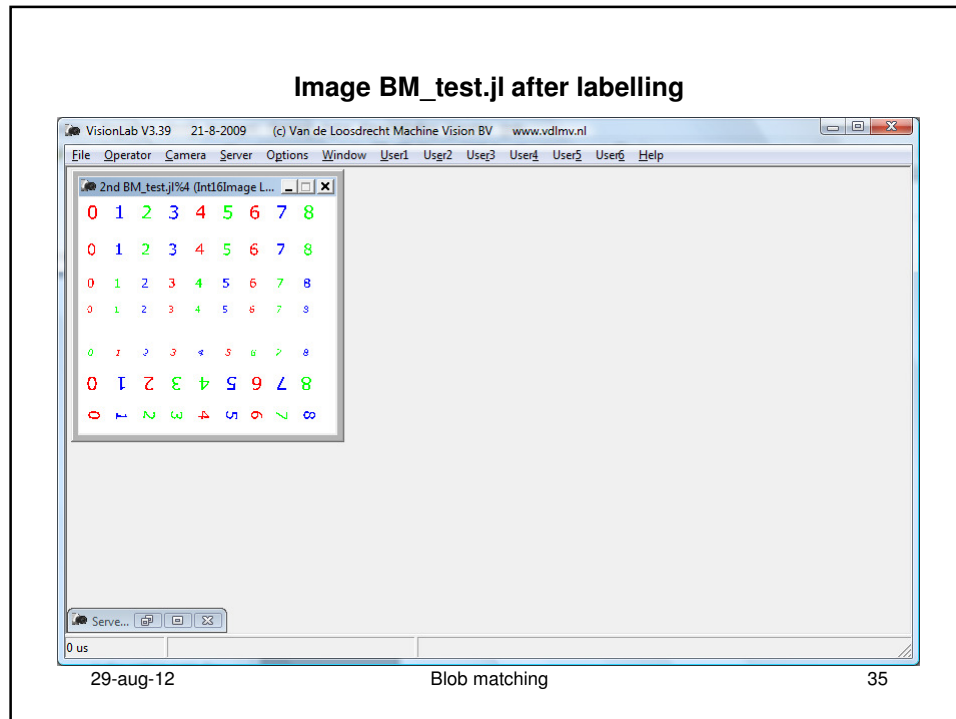

Blob Matcher patterns

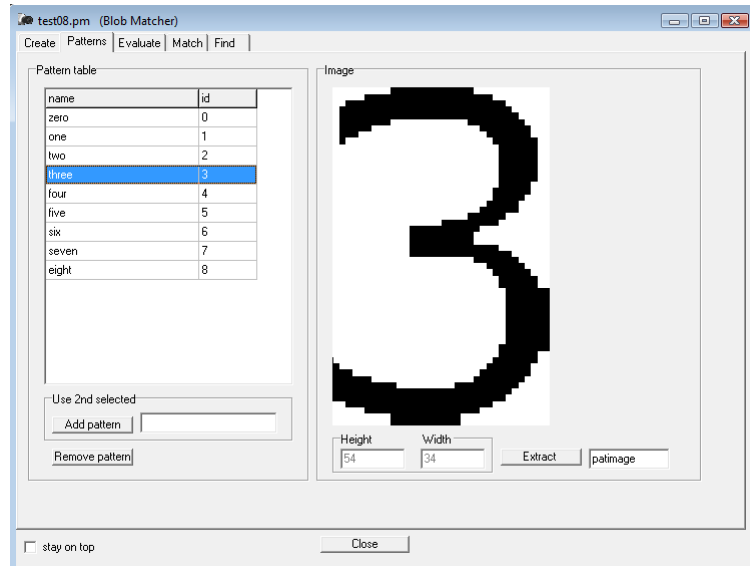


29-aug-12

Blob matching

37

The result of the search

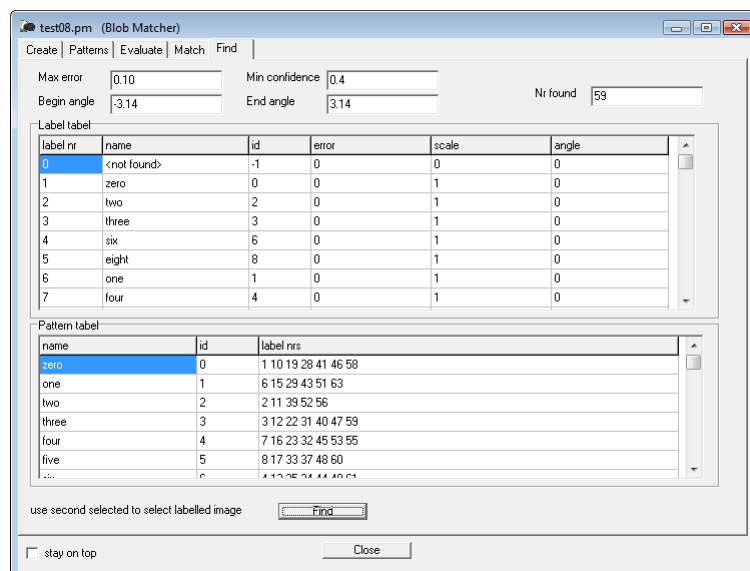


29-aug-12

Blob matching

38

Click on label number 3 in label table

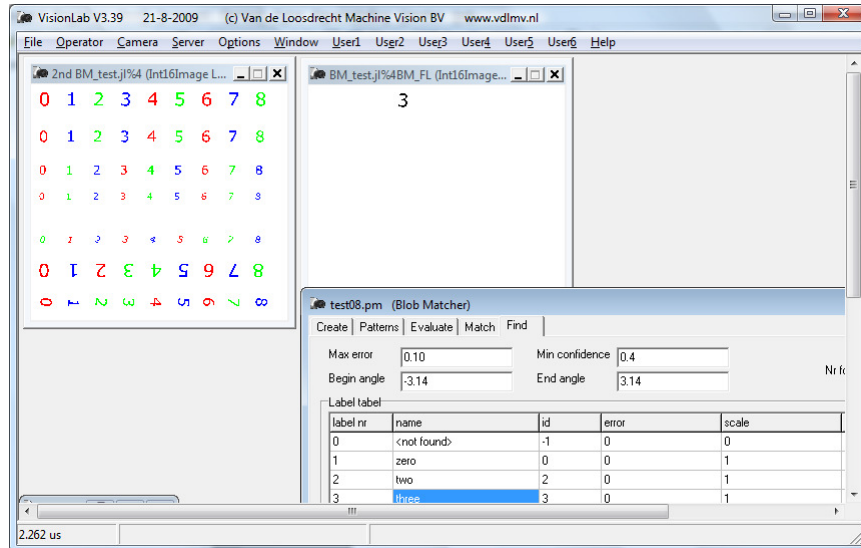


29-aug-12

Blob matching

39

Click on pattern 3 in pattern table

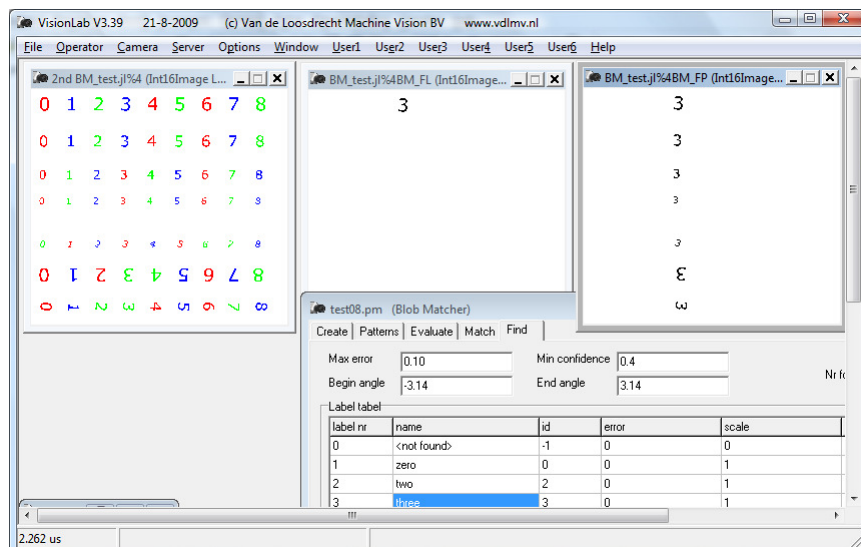

29-aug-12

Blob matching

40

Interpreting the result of the search for all patterns

- In the label table for each label the pattern found is enumerated together with the match error, the scale factor and rotation angle

If a blob in the image can not be classified with error < max error and confidence > min conf, its entry in the label table will be <not found>

For convenience of using the operator PM_FindPatterns in scripts the first entry in the label table is for label 0 (= back ground), so label nr is index in array

- In the pattern table for each pattern the corresponding label numbers are enumerated

In scripts the label nrs field can be used with ThresholdMulti to select the corresponding blobs

29-aug-12

Blob matching

41

Demonstration speed of FindAllPatterns


- Open image hu_test_eval.jl
(1500x1500 pixels with 107 digits 0..8, random rotated and random scaled)
- ThresholdIsoData image DarkObject or
ThresholdFast image 0 134 0 255 (faster)
- Label image EightConnected
- Open blob matcher test08.pm
- Set: NrofRotations=40, FillRatio=0, RandomSize =0
- Select Find tab
- Second select labeled image using F5
- Find patterns with MaxError = 0.15, MinConf = 0.3, Angle <-3.14 .. 3.14>

29-aug-12

Blob matching

42

Test image, 1500x1500 pixels with 107 digits 0..8, random rotated and random scaled

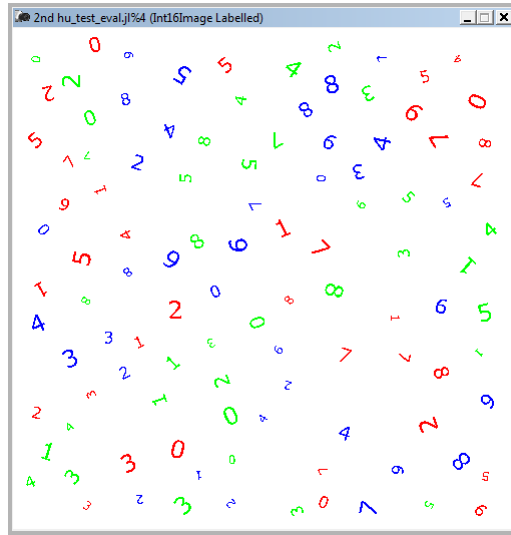


29-aug-12

Blob matching

43


Blob Matcher parameters

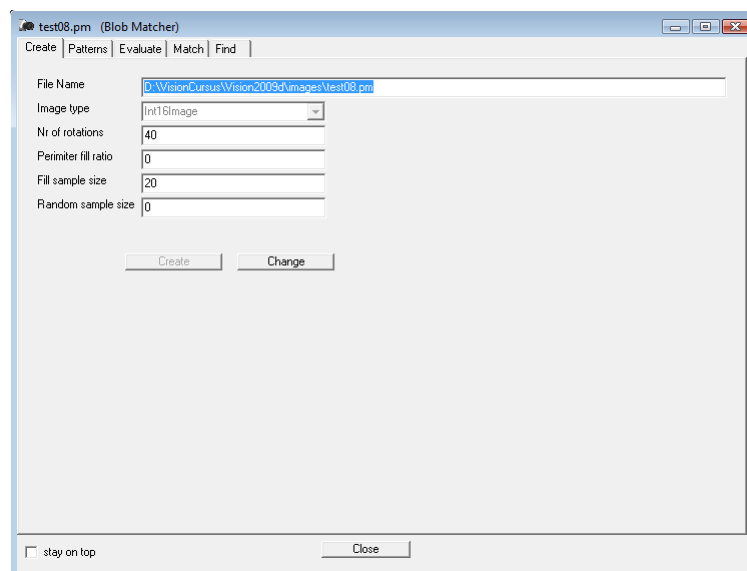

29-aug-12

Blob matching

44

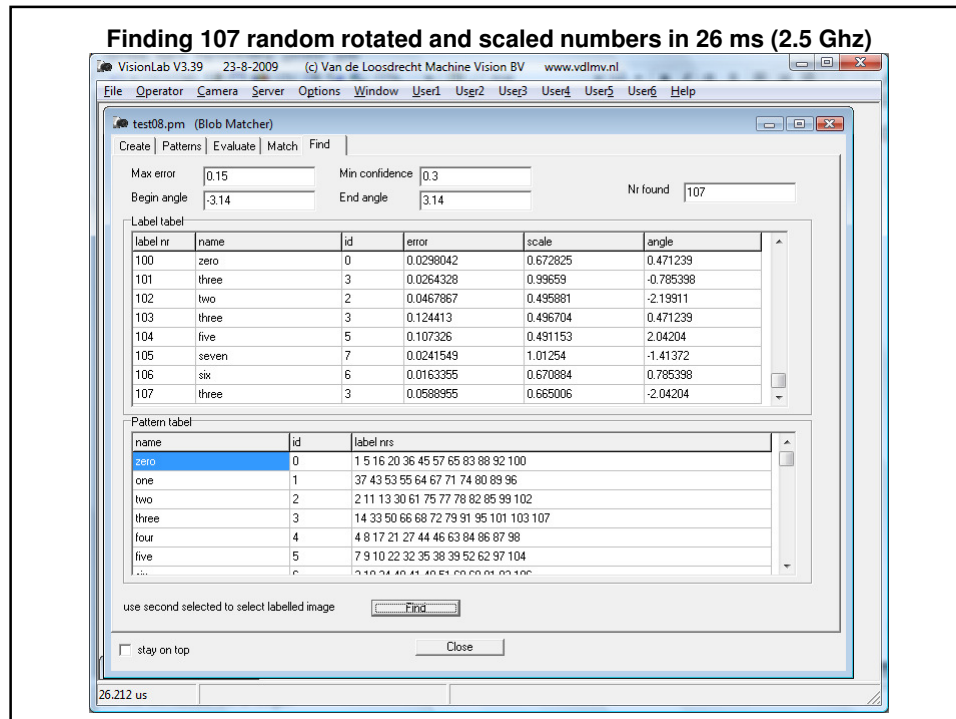

FindBlob

FindBlob (srcImage patImage destImage connected maxError beginAngle endAngle nrOfRotations perimeterFillRatio fillSampleSize randomSampleSize)

The FindBlob operator finds a blob in a image

All images are binary images

The result of the search is an image with the blobs found.

Menu: Operator | Pattern Matching

FindBlob (*)

The implementation of the FindBlob in Vision Lab uses a combination of 3 techniques:

- Contour matching, compulsory
Parameter: number of rotations
Only the contour pixels are used to find the scaling and rotation
- “Filling” matching, optional
Parameters: perimeterFillRatio and fillSampleSize
The interior of the object is sampled to find more accurate scaling and rotation
- Random check, optional
Parameter: randomSampleSize
Maximum number of pixels which are selected to check the matching

29-aug-12

Blob matching

47

FindBlob parameters (*)

srcImage: name of the binary image to search in
patImage: name of the binary image with the pattern to search
destImage: name of the binary image with the result of the search
connected: the connectivity for the images, FourConnected or Eightconnected
beginAngle and **endAngle:** limit the search range for the rotation
nrOfRotations: the number of rotations in the search space
perimeterFillRatio: error ratio between contour match and interior match
fillSampleSize: number of pixels sampled on ray in interior of blob
randomSampleSize: maximum number of pixels which are selected to check the matching

29-aug-12

Blob matching

48

Demonstration finding one blob in an image

FindBlob can be used to find one single pattern in a labeled image without the need to create a complete Blob Matcher


- Open image BM_test.jl
 - ThresholdIsoData image DarkObject
 - Use ROI to select a random number
 - Second select roi image using F5
 - Select image
 - FindBlob on image, see parameters in slide
 - See result of search
-
- Note: this operator can NOT be used for blob groups

29-aug-12

Blob matching

49



Image BM_test.jl and pattern to search for

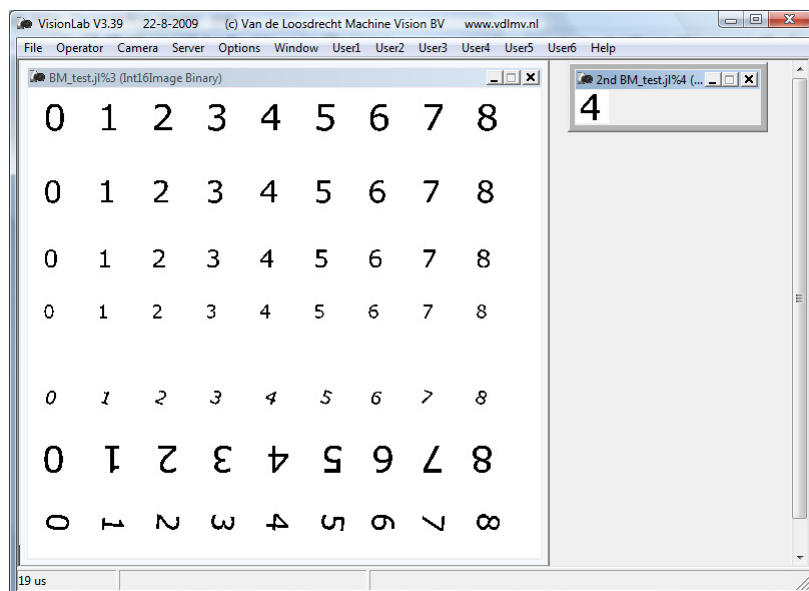

29-aug-12

Blob matching

50

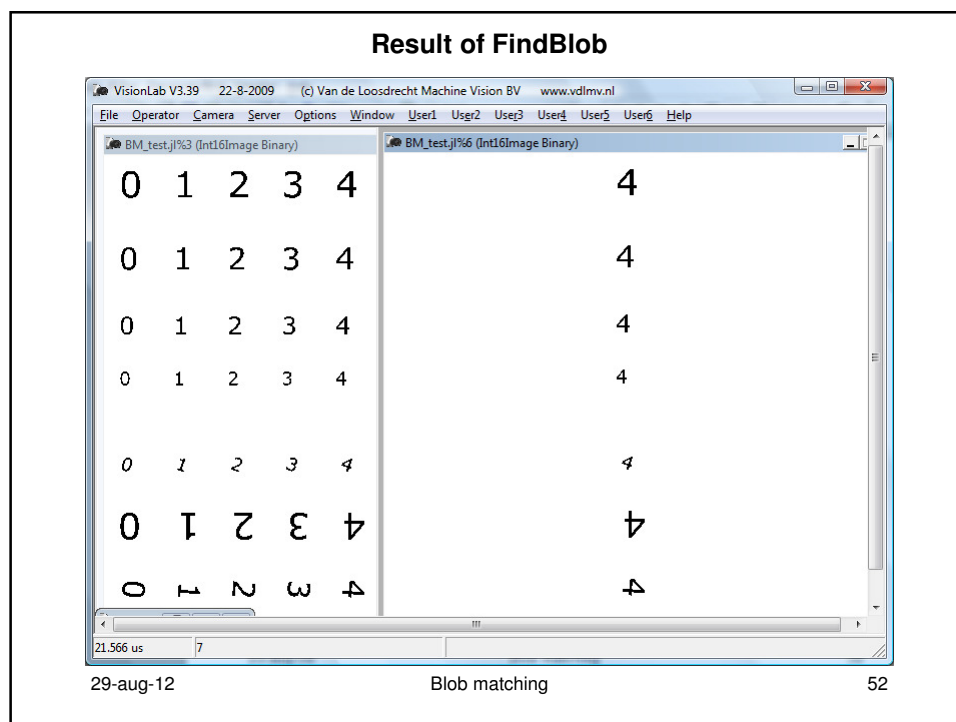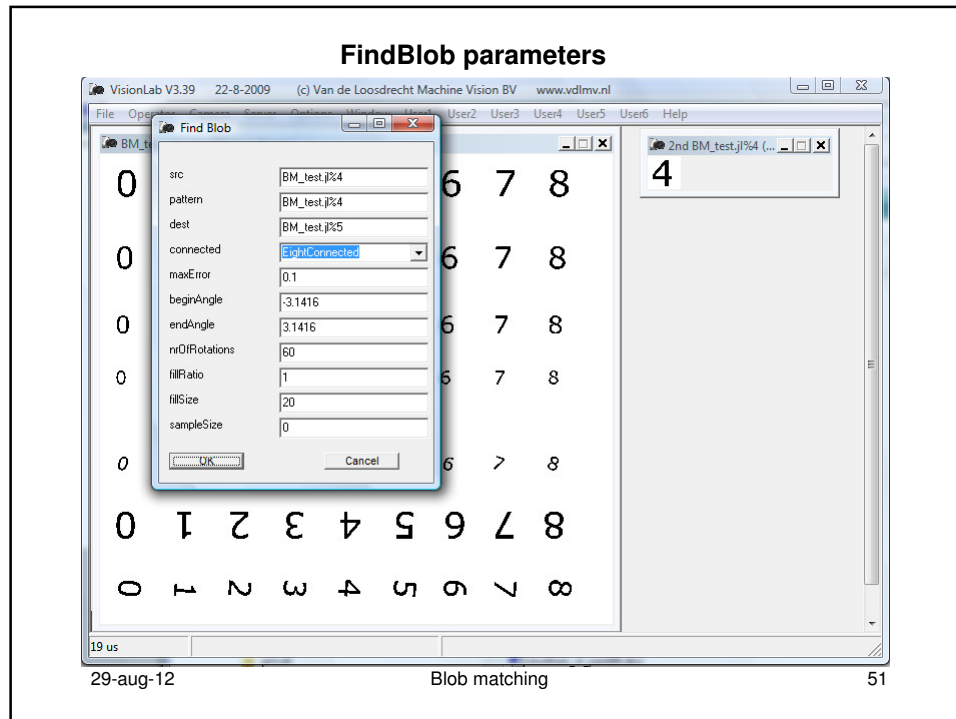

Comparing with alternative methods

Alternatives for Blob Matching are:

- **Neural networks**
 - Image classification
 - Feature vector classification
- **Correlation**

Related presentations:

- Classification with neural networks part I and part II with examples how to use neural networks for classifying objects
- Fourier Transforms using correlation to match objects

29-aug-12

Blob matching

53

Comparing with alternative methods

Blob matching

Advantage:

- **Rotation and scale invariant**
- **Fast**
- **Easy training, only one template needed, few parameters**

Disadvantage:

- **Works only well on correctly segmented binary images**
- **Can not handle occlusion**

29-aug-12

Blob matching

54

Comparing with alternative methods

Neural network (image classifying)

Advantage:

- Can work with grayscale and color images, can use grayscale or color info to discriminate
- Can use multiple patterns for one class in training to handle some degree of variation

Disadvantage:

- Complex setting of the learning parameters
- Can not handle scaling or rotation

29-aug-12

Blob matching

55

Comparing with alternative methods

Neural network (feature vector)

Advantage:

- Can work with grayscale and color images, can use grayscale or color info to discriminate
- Can use multiple patterns for one class in training to handle some degree of variation
- Can be scaling and/or rotation invariant if features are invariant

Disadvantage:

- Complex setting of the learning parameters
- Choosing the right features can be difficult

29-aug-12

Blob matching

56

Comparing with alternative methods

Correlation (FFT)

Advantage:

- Simple to use

Disadvantage:

- Slow
- Can not handle scaling or rotation
- Can only compare with one template at a time

29-aug-12

Blob matching

57

Using blob matching in scripts (*)

- Overview script commands
- Details on script commands
- Example script BM_example.jls
- Example script BM_findpattern.jls
- Class Lexicon

29-aug-12

Blob matching

58

Overview script commands (1) (*)

- **PM_AddPattern** <imageName> <pmName>
- **PM_AllMatches** <imageName> <pmName> <beginAngle>
<endAngle> <&\$array>
- **PM_BestMatch** <imageName> <pmName> <beginAngle>
<endAngle>
- **PM_ChangeBlobMatcher** <bmName> <nrOfRotations>
<perimeterFillRatio> <fillSampleSize> <randomSampleSize>
- **PM_CreateBlobMatcher** <bmName> <imagetype> <nrOfRotations>
<perimeterFillRatio> <fillSampleSize> <randomSampleSize>
- **PM_Delete** <pmName>
- **PM_EvaluateCIS** <pmName> <cisName> <beginAngle> <endAngle>
<minConfidence> <detailsStr>
- **PM_FindPatterns** <imageName> <pmName> <maxError>
<minConfidence> <beginAngle> <endAngle> <&\$labelTab>
<&\$patTab>

29-aug-12

Blob matching

59

Overview script commands (2) (*)

- **PM_GetImageType** <pmName>
- **PM_GetParams** <pmName>
- **PM_GetPatternsNameTab** <pmName>
- **PM_PatternName** <pmName> <id>
- **PM_PatternId** <pmName> <name>
- **PM_PatternNameImage** <pmName> <nameImage> <patternName>
- **PM_PatternIdImage** <pmName> <nameImage> <id>
- **PM_Rename** <pmNameOld> <pmNameNew>
- **PM_ReadFromFile** <pmName> <fileName>
- **PM_RemovePattern** <pmName> <name>
- **PM_WriteToFile** <pmName> <fileName>

29-aug-12

Blob matching

60

Details script commands (*)

PM_AddPattern <imageName> <pmName>
 Add image as pattern to pattern matcher

PM_AllMatches <imageName> <pmName> <beginAngle> <endAngle>
 <&\$array>
 Match image with all patterns and give result in an array with tuples
 (<patternId> <error> <scale> <angle>) sorted on lowest error

PM_BestMatch <imageName> <pmName> <beginAngle> <endAngle>
 Find the best match for image with all patterns and give result in an array
 Function result is <patternId> <confidence> <error> <scale> <angle>

PM_ChangeBlobMatcher <bmName> <nrOfRotations> <perimeterFillRatio>
 <fillSampleSize> <randomSampleSize>
 Change the parameters of the blob matcher

29-aug-12

Blob matching

61

Details script commands (*)

PM_CreateBlobMatcher <bmName> <imagetype> <nrOfRotations>
 <perimeterFillRatio> <fillSampleSize> <randomSampleSize>
 Create a blob matcher

PM_Delete <pmName>
 Delete pattern matcher from memory

PM_EvaluateCIS <pmName> <cisName> <beginAngle> <endAngle>
 <minConfidence> <detailsStr>
 Evaluate blob matcher with a Class Image Set
 Function result is string with the evaluation report

29-aug-12

Blob matching

62

Details script commands (*)

PM_GetImageType <pmName>

Get image type of pattern matcher

PM_GetParams <pmName>

Get the parameters of the pattern matcher

Function result is a string with the parameters

PM_GetPatternsNameTab <pmName>

Function result is a string with <nr of patterns> [<patternName>
<patternId>]

29-aug-12

Blob matching

63

Details script commands (*)

**PM_FindPatterns <imageName> <pmName> <maxError> <minConfidence>
<beginAngle> <endAngle> <&\$labelTab> <&\$patTab>**

Find patterns in blobs of labeled image

Function result is number of patterns found

Parameters:

imageName: name of *labeled* image

pmName: name of the pattern matcher

maxError: maximum error of best found pattern for blob

minConfidence: minimum confidence of best found pattern for blob

beginAngle and endAngle: limit the search range for the rotation

&\$labelTab: an array with tuples (<patternId> <error> <scale> <angle>).

Index is labelNr. A table with the search results for each label, including the BackGround (= 0). If for blob with label search was not successful, patternId = -1 will be used

&\$patternTab: an array with tuples (<labelNr1> .. <labelNrN>), index is patternId. A table with label numbers of the blobs for which the pattern was found

29-aug-12

Blob matching

64

Details script commands (*)**PM_NumberOfPatterns <pmName>**

Function result is a string with <nr of patterns>

PM_PatternName <pmName> <id>

Function result is a string with the pattern name for the specified pattern id

PM_PatternId <pmName> <name>

Function result is a string with the pattern id for the specified pattern name

PM_PatternNameImage <pmName> <nameImage> <patternName>

Make a copy of the specified pattern image

PM_PatternIdImage <pmName> <nameImage> <id>

Make a copy of the specified pattern image

29-aug-12

Blob matching

65

Details script commands (*)**PM_Rename <pmNameOld> <pmNameNew>**

Rename pattern matcher

PM_ReadFromFile <pmName> <fileName>

Read pattern matcher from file

PM_RemovePattern <pmName> <name>

Remove pattern with specified name from pattern matcher

PM_WriteToFile <pmName> <fileName>

Write pattern matcher to file

29-aug-12

Blob matching

66

Example script BM_example.jls (*)

- creating a blobmacher using an image (BM_09.jl) with all patterns

0 1 2 3 4 5 6 7 8 9

- matching a test image (BM_example_test4.jl)

4

- result in \$res:
<patternId> <confidence> <error> <scale> <angle>

29-aug-12

Blob matching

67

script BM_example.jls (1) (*)

```
$path = lpwd
$oldpath = pwd
cwd $path
```

Save old file path server

File path server = file path client

```
PM_CreateBlobMatcher pm Int16Image 60 1 20 0
$names = "zero one two three four five six seven eight nine"
VarToArray &$names &$nameTab
```

Create Blob Matcher

Create array with the names of the patterns

```
Iread allPats BM_09.jl
```

```
Thresholdsodata allPats DarkObject
```

Read image with patterns

```
$nrNums = LabelBlobs allPats EightConnected
```

```
$maxBlob = BlobAnalysisArray allPats &$tab SortDown TopLeft UseX Height TopLeft
Width
```

Use BlobAnalysis to find the positions of the patterns

29-aug-12

Blob matching

68

script BM_example.jls (2) (*)

for \$i = 0 to \$maxBlob do	
VarToArray &\$tab[\$i] &\$elm	For all pattern do
\$label = \$elm[0]	Find top left, width and height
\$h = \$elm[1]	
\$tl = \$elm[2]	
\$w = \$elm[3]	
\$x = getnthfromvector 1 \$tl	
\$y = getnthfromvector 2 \$tl	Cut out the pattern
ROI allPats roi \$x \$y \$h \$w	Add pattern to Blob Matcher
Threshold roi \$label \$label	
PM_AddPattern roi pm \$nameTab[\$i]	
endfor	
PM_WriteToFile pm BM_09.pm	Write Blob Matcher to file
Iread test BM_example_test4.jl	Test Blob Matcher with test image
\$res = PM_BestMatch test pm -0.5 0.5	
PM_Delete pm	
cwd \$oldpath	Set file path server to original path

29-aug-12

Blob matching

69

Example script BM_findpattern.jls (*)

Example how to use the FindAllPatterns operator on a labeled image

- **Open BlobMatcher**
- **Open image, threshold and label**
- **FindAllPatterns**
- **Extract the fours and fives**

29-aug-12

Blob matching

70

script BM_findpatterns.jls (*)

```

$path = lpwd
$oldpath = pwd
cwd $path

PM_ReadFromFile pm test08.pm
IRead test BM_test.jl
Thresholdsodata test DarkObject
LabelBlobs test EightConnected
PM_FindPatterns test pm 0.10 0.4 -3.14 3.14 &$labelTab &$patTab
Copy test fours
$patId = PM_PatternId pm four
ThresholdMulti fours $patTab[$patId]
Display fours
Copy test fives
$patId = PM_PatternId pm five
ThresholdMulti fives $patTab[$patId]
Display fives

PM_Delete pm
cwd $oldpath

```

Save old file path server
File path server = file path client

Read BlobMatcher from file
Read test image, threshold and label

Ask for patternId for pattern 'four'
In \$patTab[\$patId] are all labels for found objects (= 'four')

Set file path server to original path

29-aug-12

Blob matching

71

Class Lexicon (*)**Menu: Operator | Pattern Lexicon**

A class lexicon can be to improve the reliability of classifying items that consist of more then one objects.

Example: identifying street names on street name signposts in a city.

First a classifier like a pattern matcher is trained for the character font.

Then the lexicon is filled with all street names in the city.

After the pattern matcher has identified the best match for each individual character found in the signpost, the lexicon is consulted for the best match for the street name.

In this way errors in individual matches of characters can be compensated.

29-aug-12

Blob matching

72

Class lexicon commands (*)

CLX_AddWord <clxName> <\$word>

Add word to class lexicon

clxName: name of the class lexicon

word: variable with string containing all classNames of word separated by spaces

CLX_Clear <clxName>

Remove all words from class lexicon

clxName: name of the class lexicon

CLX_CreateClassLexicon <clxName> <\$classTab>

Create class lexicon from classTab, this information can be retrieved with

PM_GetPatternsNameTab, CIS_GetClassTab or CFS_GetClassTab, format of classTab: <nrClasses> [<className> <classId>]

clxName: name of the class lexicon

29-aug-12

Blob matching

73

Class lexicon commands (*)

CLX_Delete <clxName>

Delete class lexicon with name clxName

clxName: name of the class lexicon

CLX_FindBestWord <clxName> <&\$wordMatchTab> <&\$bestWord> <optimize>

Find best matched word in class lexicon

clxName: name of the class lexicon

wordMatchTab: array with for each letter the pattern match result for all classes, format [<classId> <value>]

bestWord: string with best matched word in class lexicon, classNames are separated by spaces

optimize: possible values = OptimizeForMinimum and OptimizeForMaximum, indicates whether FindBestWord operator searches for best minimal or maximal values

CLX_GetWords <clxName> <&\$wordTab>

Get all words in class lexicon

clxName: name of the class lexicon

wordTab: array with the words

Function result is number of words in lexicon

29-aug-12

Blob matching

74

Class lexicon commands (*)

CLX_NrClasses <clxName>
Get number of classes in class lexicon
clxName: name of the class lexicon
function result is number of classes in lexicon

CLX_NrWords <clxName>
Get number of words in class lexicon
clxName: name of the class lexicon
function result is number of words in lexicon

CLX_RemoveWord <clxName> <\$word>
Remove word from class lexicon
clxName: name of the class lexicon
word: variable with string containing all classNames of word seperated bij spaces

CLX_Rename <clxNameOld> <clxNameNew>
Change name of class lexicon
clxNameOld: old name of the class lexicon
clxNameNew: new name of the class lexicon

29-aug-12

Blob matching

75

Class lexicon commands (*)

CLX_ReadFromFile <clxName> <fileName>
Read class lexicon from file
clxName: name of the class lexicon
fileName: file name to read from

CLX_WriteToFile <clxName> <fileName>
Write class lexicon to file
clxName: name of the class lexicon
fileName: file name to write to

29-aug-12

Blob matching

76

Class lexicon commands (*)

Note: Raw class lexicons contain only classIds and no classNames

CLX_AddRawWord <clxName> <\$word>

Add raw word to class lexicon

clxName: name of the class lexicon

word: variable with string containing all classIds of word separated by spaces

CLX_CreateRawClassLexicon <clxName> <nrClasses>

Create raw class lexicon with nrClasses classes.

clxName: name of the class lexicon

CLX_FindBestRawWord <clxName> <&\$wordMatchTab> <&\$bestWord> <optimize>

Find best matched word in raw class lexicon

clxName: name of the class lexicon

wordMatchTab: array with for each letter the pattern match result for all classes, format [<classId> <error>]

bestWord: string with best matched word in class lexicon, classIds are separated by spaces

optimize: possible values = OptimizeForMinimum and OptimizeForMaximum, indicates whether FindBestWord operator searches for best minimal or maximal values

29-aug-12

Blob matching

77

Class lexicon commands (*)

CLX_RemoveRawWord <clxName> <\$word>

Remove raw word from class lexicon

clxName: name of the class lexicon

word: variable with string containing all classIds of word separated by spaces

29-aug-12

Blob matching

78